

USB/PS3/IPDS unit
(D546)

USB/PS3/IPDS unit (D546)

PARTS CATALOG

 
This catalog gives the numbers and names of parts on this machine.

1. USB/PS3/IPDS unit (D546).....	2
Parts Index	6





October 28, 2010

1.Controller Option(D546)



IPDS Unit Type C5501
(D546-05/06/07)



  Camera Direct Print Card Type I
(D546-21)

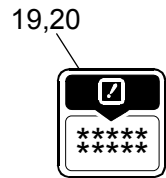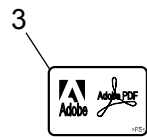

USB2.0/SD Slot Type F (D546-23)

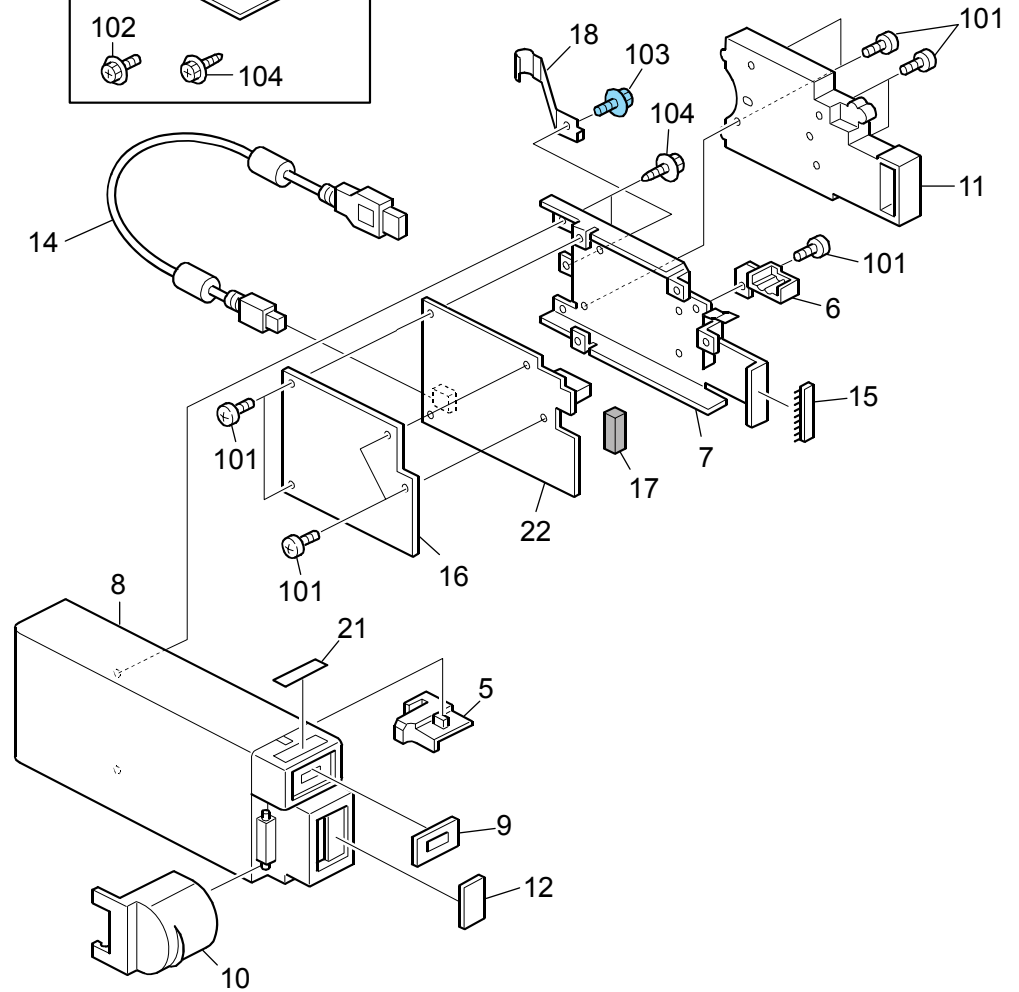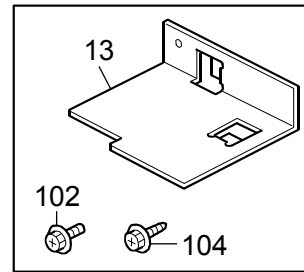

1.Controller Option(D546)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D546 5005	SD-Card:IPDS:EXP:Ass'y	1
2	D546 5021	SD-Card:P-Bridge:EXP:Ass'y	1
3	GA00 3144	Decal:PDF Direct	1
4	D546 5023	SD-Card:PDF:EXP:Ass'y	1
5	D422 1264	Lens:SD/USB	1
6	D422 1265	Shielding Plate:LED	1
7	D422 1267	Bracket:PCB:Ass'y	1
8	D422 1275	Case:SD/USB:EXP:Ass'y	1
9	D422 1277	Panel:USB:EXP	1
10	D422 1278	Cover:Guard:SD:EXP	1
11	D422 1280	Bracket:SD/USB:Main:EXP	1
12	D422 1281	Panel:SD:EXP	1
13	D422 1284	Bracket:Cover:Left	1
14	D422 5000	Cable:USB:700	1
15	D422 5020	Discharge Brush:12F:P025:Front	1
16	D422 5025	Shield Tape:CU10S:Front	1
17	D422 5030	Gasket:65TSV:Front	1
18	D422 5052	Spring Plate:Base	1
19	D422 5108	Decal:SD-Card:Operate:EXP	1
20	D422 5110	Decal:SD-Card:Operate:EXP2	1
21	D422 5112	Decal:SD/USB:EXP	1
22	D422 5701	PCB:Fusion:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0353 0060N	Bind Screw - M3x6	
102	0451 3006N	Tapping Screw - 3x6	
103	0454 3006Q	Tapping Screw - M3x6	
104	0456 3008N	Tapping Screw - M3x8	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D546 5005	SD-Card:IPDS:EXP:Ass'y	3 - 1
D546 5021	SD-Card:P-Bridge:EXP:Ass'y	3 - 2
D546 5023	SD-Card:PDF:EXP:Ass'y	3 - 4

Part No.	Description	Page and Index No.
D422 1264	Lens:SD/USB	3 - 5
D422 1265	Shielding Plate:LED	3 - 6
D422 1267	Bracket:PCB:Ass'y	3 - 7
D422 1275	Case:SD/USB:EXP:Ass'y	3 - 8
D422 1277	Panel:USB:EXP	3 - 9
D422 1278	Cover:Guard:SD:EXP	3 - 10
D422 1280	Bracket:SD/USB:Main:EXP	3 - 11
D422 1281	Panel:SD:EXP	3 - 12
D422 1284	Bracket:Cover:Left	3 - 13
D422 5000	Cable:USB:700	3 - 14
D422 5020	Discharge Brush:12F:P025:Front	3 - 15
D422 5025	Shield Tape:CU10S:Front	3 - 16
D422 5030	Gasket:65TSV:Front	3 - 17
D422 5052	Spring Plate:Base	3 - 18
D422 5108	Decal:SD-Card:Operate:EXP	3 - 19
D422 5110	Decal:SD-Card:Operate:EXP2	3 - 20
D422 5112	Decal:SD/USB:EXP	3 - 21
D422 5701	PCB:Fusion:Ass'y	3 - 22

Part No.	Description	Page and Index No.
GA00 3144	Decal:PDF Direct	3 - 3

Part No.	Description	Page and Index No.
0353 0060N	Bind Screw - M3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	3 - 102
0454 3006Q	Tapping Screw - M3x6	3 - 103
0456 3008N	Tapping Screw - M3x8	3 - 104