

**Bridge Unit BU3030/BU3060
Machine Code: D386/D634**

Field Service Manual

September, 2011
Subject to change

Safety and Symbols

Replacement Procedure Safety


CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

When taking apart the bridge unit, first take the unit out of the copier.

Symbols Used in this Manual

This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring


: E-ring

TABLE OF CONTENTS

- Safety and Symbols..... 1
 - Replacement Procedure Safety..... 1
- 1. Replacement and Adjustment**


- Bridge Unit Control Board..... 3
- Bridge Unit Drive Motor..... 4
- Tray Exit Sensor..... 5
- Relay Sensor..... 6
- 2. Details**

- Mechanical Component Layout..... 7
- Drive Layout..... 8
- Electrical Component Layout..... 9
- Electrical Component Description..... 10
- Junction Gate Mechanism..... 11

1. Replacement and Adjustment


Bridge Unit Control Board

1

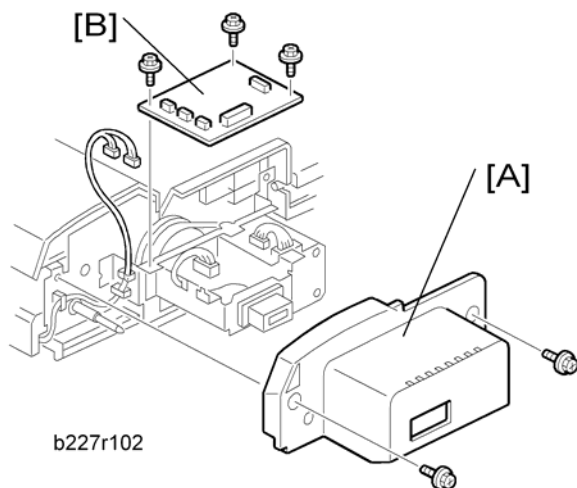

1. Bridge unit (☛ "Installation Procedure" in the base copier manual)
2. Rear cover [A] (🔩 x 2)
3. Bridge unit control board [B] (🔩 x 3, 📌 x 4)


Bridge Unit Drive Motor

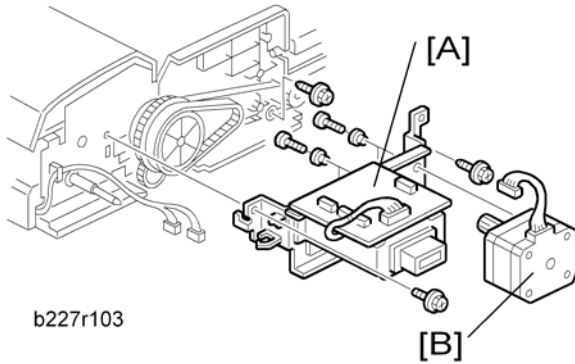


b227r103

1. Bridge unit (☛ "Installation Procedure" in the base copier manual)
2. Rear cover (☛ "Bridge Unit Control Board")
3. Bracket [A] (🔩 x 3, 🛠️ x 2)
4. Bridge unit drive motor [B] (🔩 x 4, 🛠️ x 1)

Tray Exit Sensor

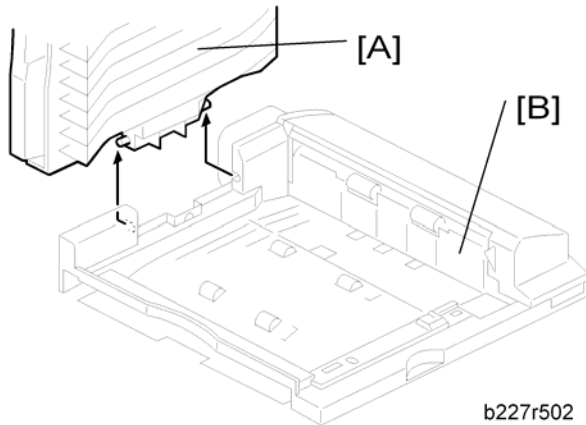

1. Bridge unit (☛ "Installation Procedure" in the base copier manual)
2. Rear cover (☛ "Bridge Unit Control Board")
3. Paper tray [A]
4. Exit guide [B] (🔧 x 1)

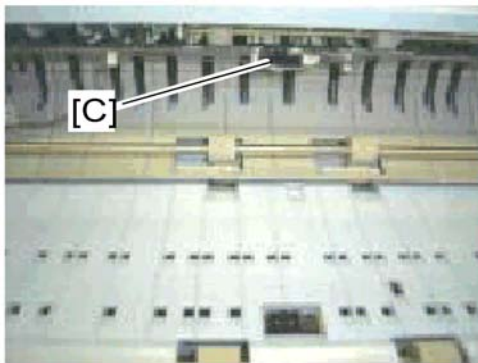


b227r503

5. Tray exit sensor [C] (🔧 x 1)

Relay Sensor

1

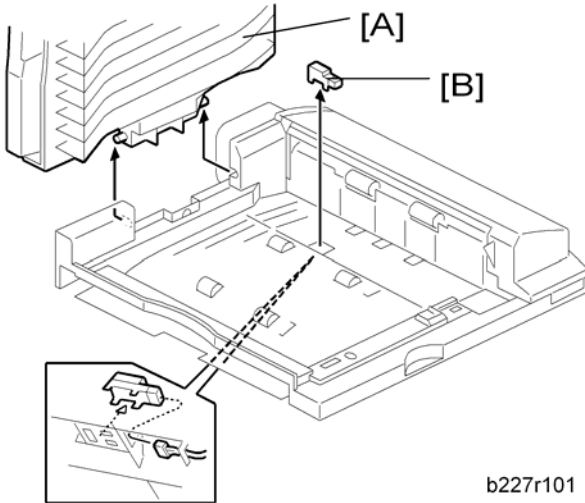


b227r101

1. Bridge unit (☛ "Installation Procedure" in the base copier manual)
2. Paper tray [A]
3. Relay sensor [B] (☞ x 1)

2. Details

2

Mechanical Component Layout

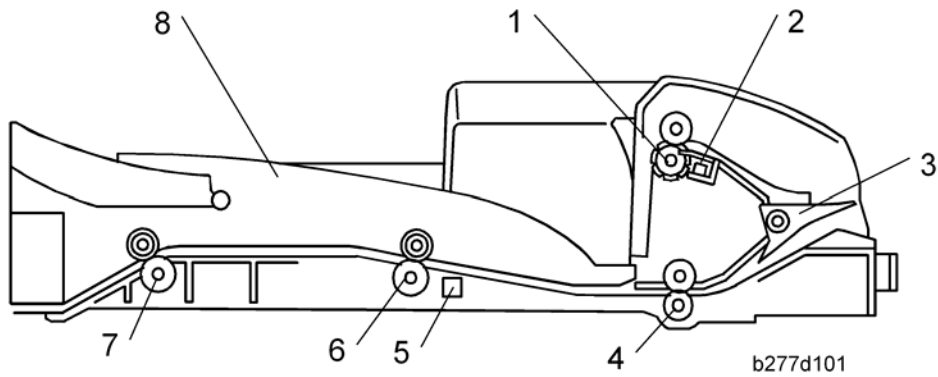


- 1. Upper Exit Roller
- 2. Tray Exit Sensor
- 3. Junction Gate
- 4. 1st Transport Roller

- 5. Relay Sensor
- 6. 2nd Transport Roller
- 7. Left Exit Roller
- 8. Paper Tray


Drive Layout

2

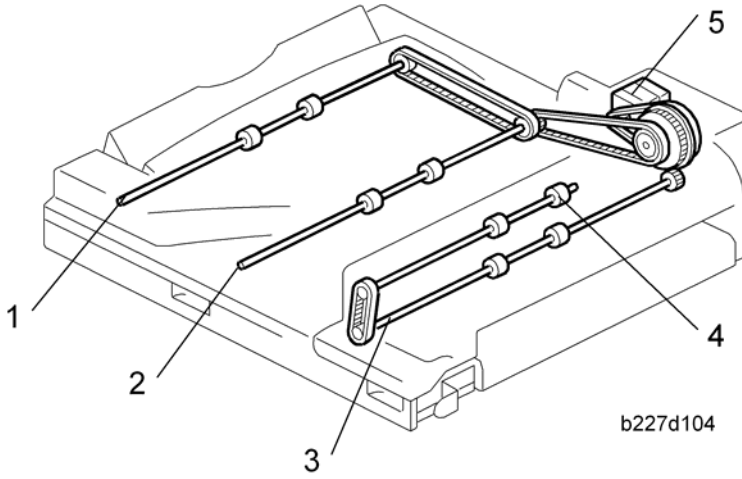

1. Left Exit Roller
2. 2nd Transport Roller
3. 1st Transport Roller
4. Upper Exit Roller
5. Bridge Unit Drive Motor

Electrical Component Layout

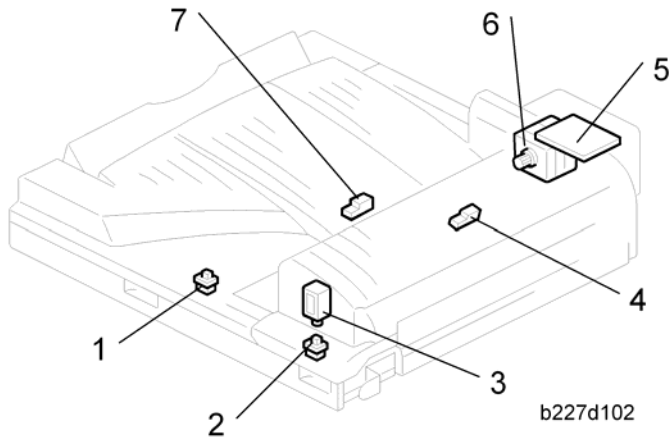


1. Left Guide Switch
2. Right Guide Switch
3. Junction Gate Solenoid
4. Tray Exit Sensor
5. Bridge Unit Control Board
6. Bridge Unit Drive Motor
7. Relay Sensor

Electrical Component Description

Symbol	Name	Function	Index No.
Motors			
M1	Drive Motor	Drives the bridge unit.	6
Sensors			
S1	Tray Exit	Checks for misfeeds.	4
S2	Relay	Checks for misfeeds.	7
Switches			
SW2	Right Guide	Detects when the right guide is opened.	2
SW3	Left Guide	Detects when the left guide is opened.	1
Solenoids			
SOL1	Junction Gate	Moves the junction gate to direct the paper to the upper tray (on top of the bridge unit) or to the finisher.	3
PCBs			
PCB1	Bridge Unit Control Board	Controls the bridge unit.	5

Junction Gate Mechanism

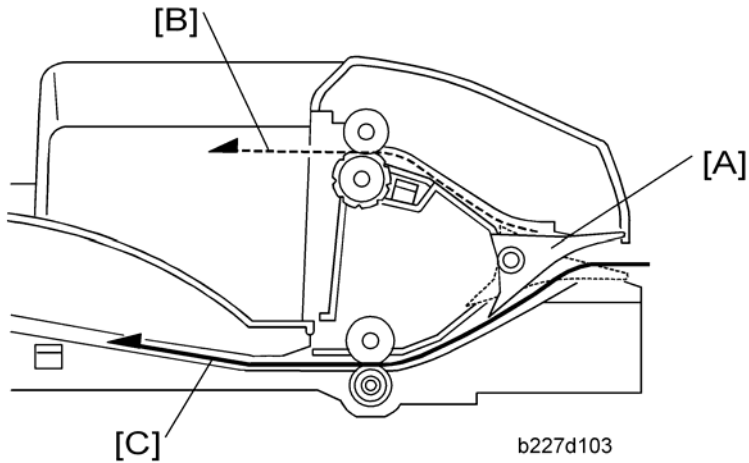

The junction gate [A] directs any paper reaching the bridge unit to either the upper tray (on top of the bridge unit) or to the finisher, depending on which has been selected.

If the junction gate solenoid has been activated, the junction gate [A] points downward and directs the paper to the upper tray [B] (dotted line path in illustration). When the solenoid is off, the junction gate points upward and the paper is fed out to the finisher [C] by the transport and left exit rollers (solid line).

MEMO

